



1. Minimum of $\frac{1}{2}$ plywood

1. Mínimo de $\frac{1}{2}$ madera contrachapada



3. Install drip edge, flashing and valleys.

3. Instale el borde de goteo, el tapajuntas y los valles.



4. Install MTR panel.
Overlap over the far
right tile.

4. Instale el panel
MTR. Superpóngalo
en la baldosa
derecha.

Example of right tile to overlap.



Example of right tile to overlap. Ensure panels are square after first 3 are in place.

Ejemplo de baldosa derecha para superponer.




Example of overlapping panels.

Ejemplo de paneles superpuestos.



5. Dry fit panels.

5. Panel de ajuste en seco

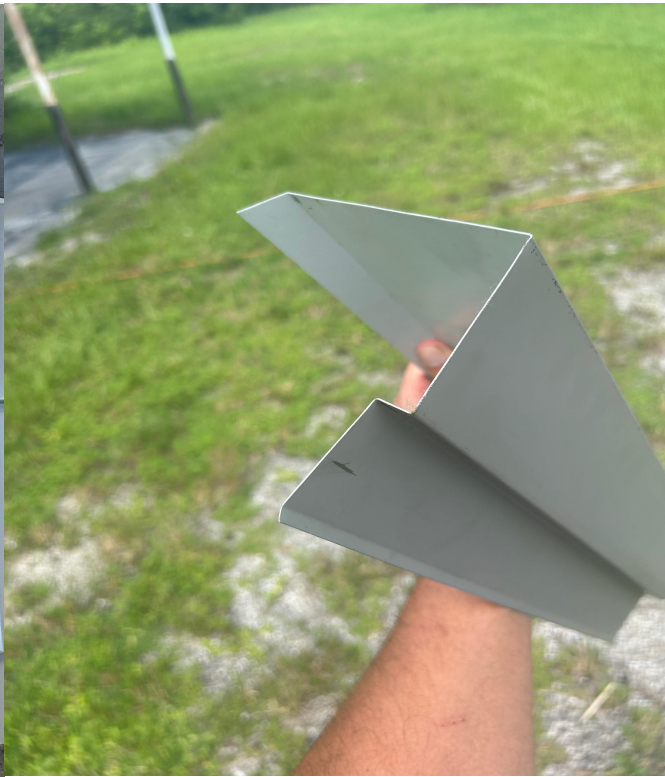

6. Install gable/rake ends.

6. Instalar los extremos del frontón/rastrillo.



7.Install ridge cap

7. Instale la tapa de la cumbrera.



Screw pattern.

Top of panel 2 ½ screw on each tile,

1 ½ screw on center on bottom of each panel

2 ½ screw on overlapping panels.

Patrón de tornillos.

Parte superior del panel: 2 tornillos y medio en cada baldosa,

1 tornillo y medio en el centro de la parte inferior de cada panel

2 tornillos y medio en los paneles superpuestos.